TELEPHONE/DATA LEGEND ▼(X)

- ▼1 1 DATA
- ▼2 2 DATA
- ▼3 3 DATA
- ▼4 4 DATA
- ▼6 6 DATA
- ▼8 8 DATA
- ✿ 1 DATA

SHEET KEYNOTES

1. CUT FLOOR AS REQUIRED. PROVIDE NEW FLOOR BOX UNDER THE CUBICLE. DELETE THE EXISTING FLOOR BOX. EXTEND CONDUIT FROM EXISTING BOX TO THE NEW ONE. PROVIDE NEW CONDUCTOR FOR POWER FROM THE PANEL.
2. CIRCUIT NEW RECEPTACLES TO A BLANK SPACE IN EXISTING PANELS LOCATED IN ROOM #1529. SEE SHEET E9 FOR PANEL LOCATIONS. PROVIDE NEW 20A/1P BREAKERS FOR CIRCUITS SHOWN IN PANELS. PROVIDE NEW RACKS.
3. CUT THE FLOOR AS REQUIRED FOR NEW FLOOR SYSTEM. PROVIDE JUNCTION BOXES, COVERS, ETC. AS REQUIRED FOR COMPLETE SYSTEM. CAREFULLY CUT THE CARPET. ROLL IT BACK AND RE-INSTALL AFTER FLOOR SYSTEM IS INSTALLED. COORDINATE WITH RON STANSFIELD (LEE'S CARPET) FOR INSTRUCTIONS OF CARE FOR ANTICO CARPET.
4. CORE-CUT NEW ACCESS HOLES AND RELOCATE DEVICES UNDER TABLES. COVER OLD HOLES WITH FLUSH PLATE. PATCH FLOORING AS REQUIRED. PROVIDE AFTERSETS TO FIT AND PROVIDE WALKER 880 2-GANG BRASS FLANGE. SECURE WITH SELF DRILLING SCREWS. LENGTH AS NEEDED (2"+). DO NOT SCAR THE WIRE. UTILIZE LEVITON DEVICE STRAPS (OR EQUAL). COVER THE OLD HOLES WITH THE WALKER FLANGE AND MATCHING BLANK COVER PLATE.
5. INSTALL SURFACE RACEWAY IN CORNER OF BLOCK COLUMN.
6. REMOVE EXISTING RACK.
7. COORDINATE THE FEED POINT FOR BOTH POWER AND DATA INTO THE POWER POLE FROM THE OFFICE AREA.
8. CIRCUIT NEW RECEPTACLES TO A BLANK SPACE IN EXISTING PANELS LOCATED IN ROOM #1026. SEE SHEET E9 FOR PANEL LOCATIONS. PROVIDE NEW 20A/1P BREAKERS FOR CIRCUITS SHOWN IN PANELS. PROVIDE NEW RACKS.
9. NEW WALLS 3-5/8" 20 GAUGE METAL STUDS AT 16" ON CENTER WITH ⅝" PAINTED GYP BOARD EACH SIDE. PAINT TO MATCH ADJACENT WALLS. EXTEND WALL TO DECK ABOVE. MATCH EXISTING BASE.
10. NEW DOOR/FRAME: PROVIDE 3'-0"x7'-0" 16 GAUGE DOOR AND FRAME. PREPPED AND PAINTED TO MATCH EXISTING. ANCHORING TYPICAL. COORDINATE HARDWARE WITH OWNERS REQUIREMENTS.
11. PROVIDE CONDUIT AND WIRE AS REQUIRED TO RE-ROUTE CIRCUITING FROM THE WALL THRU THE CEILING TO A POWER POLE. PROVIDE (2) FOUR-PLEX RECEPTACLES.
12. PROVIDE WALKER NO. 2 DUCT, NO.4 DUCT, DUCT ALIGNMENT CLIP, AFTERSET, 90 DEGREE ELBOWS, PANEL CONNECTORS, ADAPTERS, FLANGED TRIM WITH FLUSH COVER.

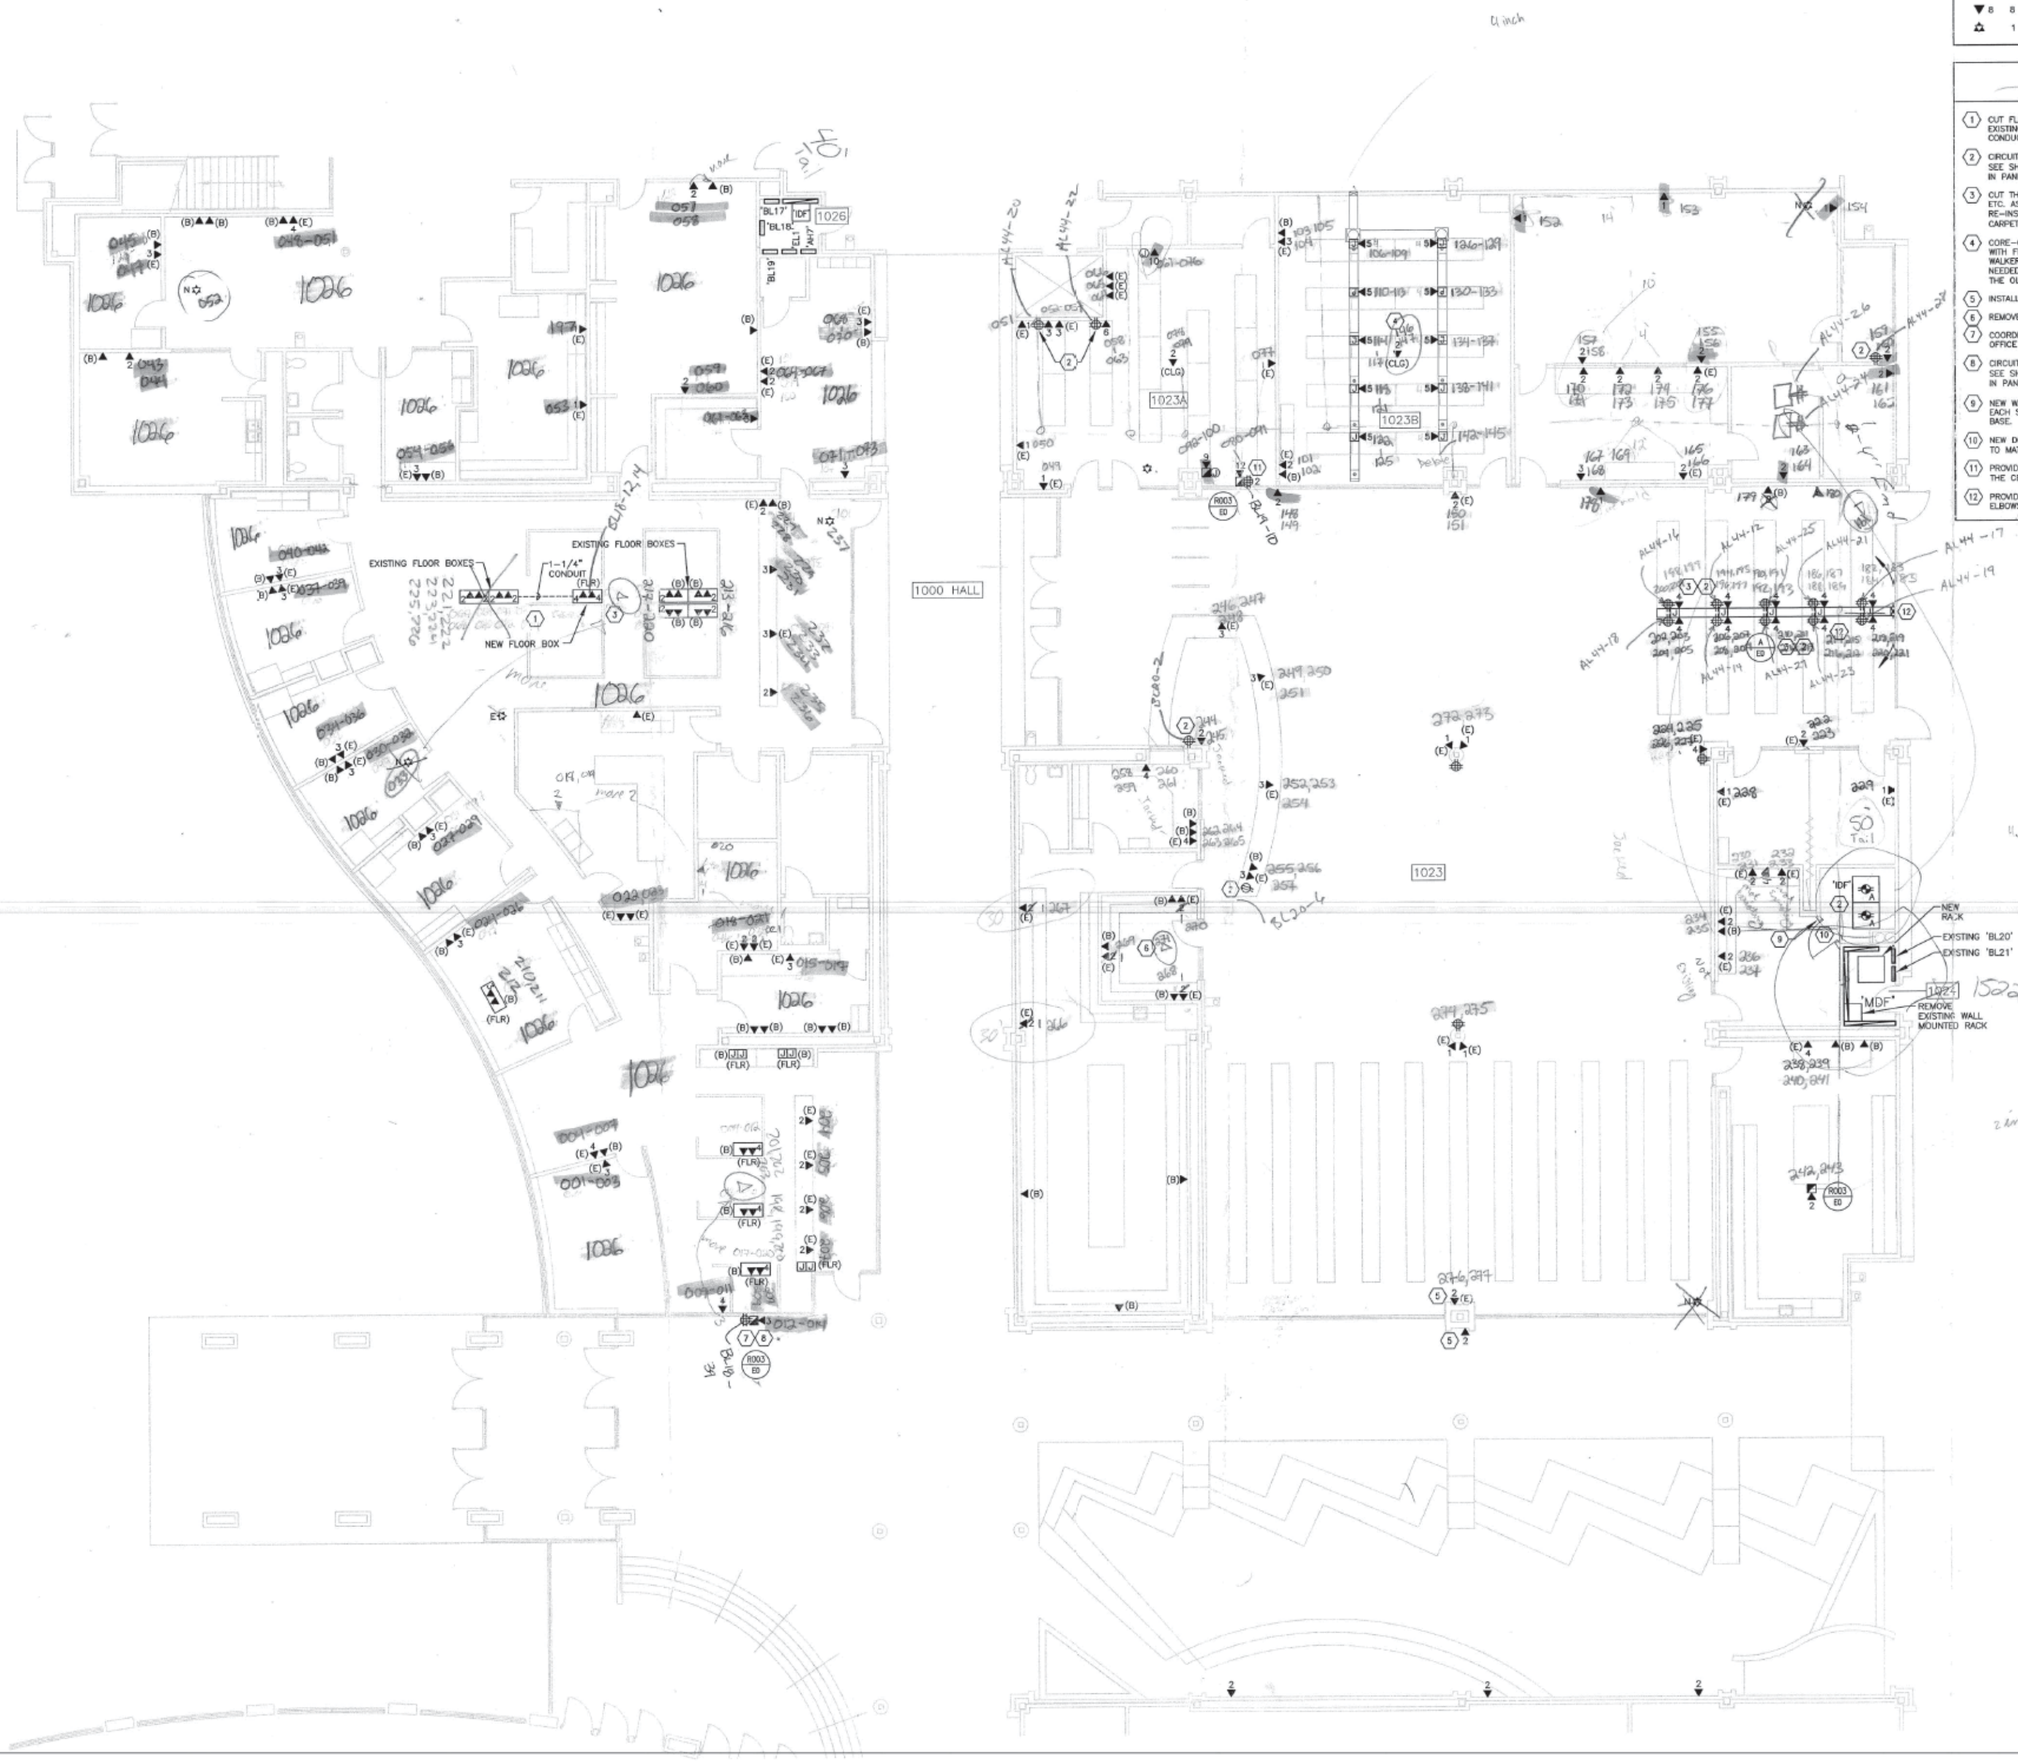

PLAN NORTH

AREA G - FIRST LEVEL DATA PLAN